


Detailization / Details / В комплект входит

Elbe 74P03, 74P19, 74P06, 74P07, 74P10, 74P17, 74P18, 74P19, 74P20, 74P22

Neime 19P03, 19P07, 19P10, 19P18

Aisch 55P03, 55P19, 55P18, 55P07, 55P10, 55P22, 55P20, 55P17, 55P06

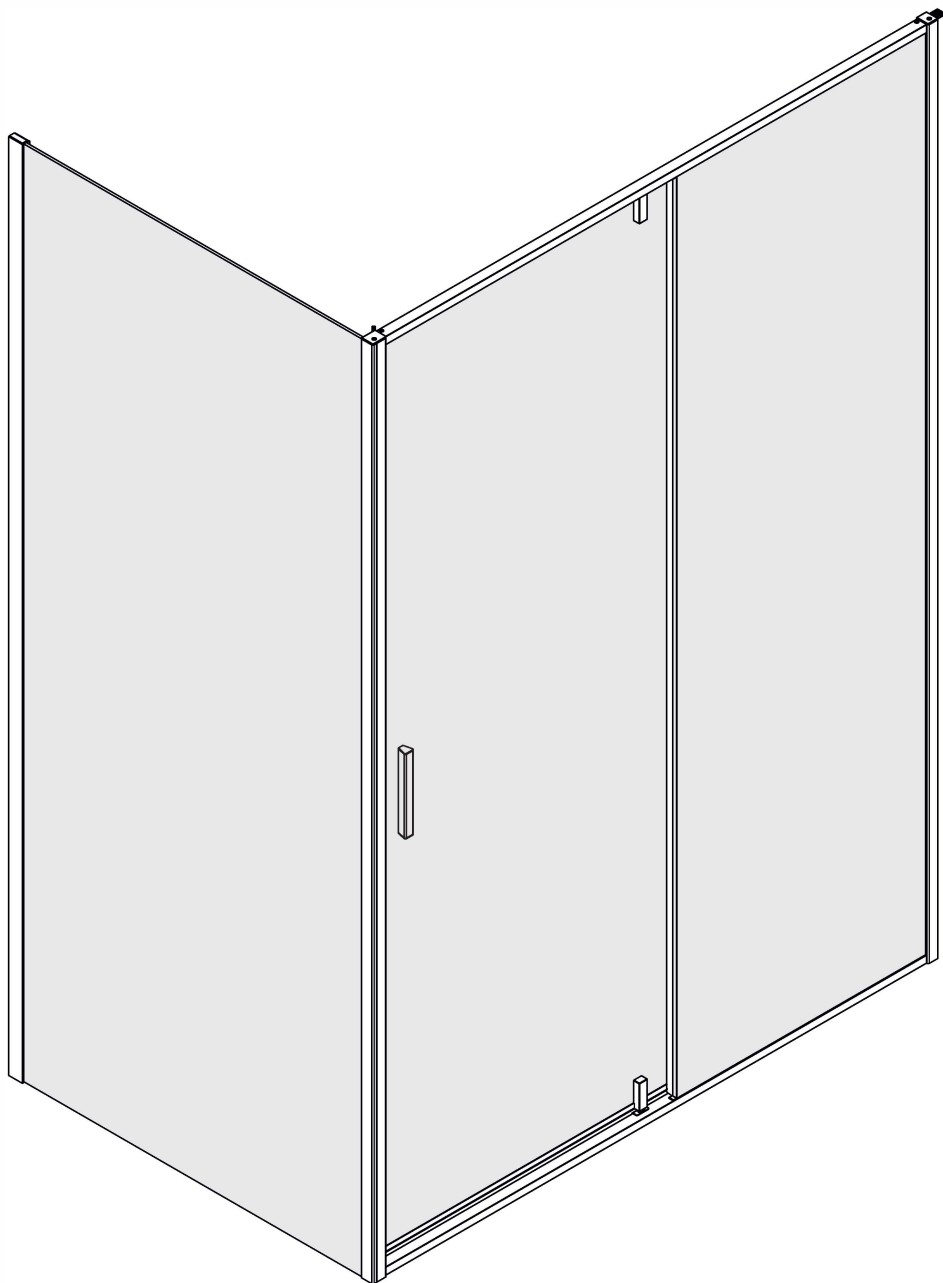


Detailization / Details / В комплект входит

Elbe 74P03, 74P19, 74P06, 74P07, 74P10, 74P17, 74P18, 74P19, 74P20, 74P22

Neime 19P03, 19P07, 19P10, 19P18

Aisch 55P03, 55P19, 55P18, 55P07, 55P10, 55P22, 55P20, 55P17, 55P06

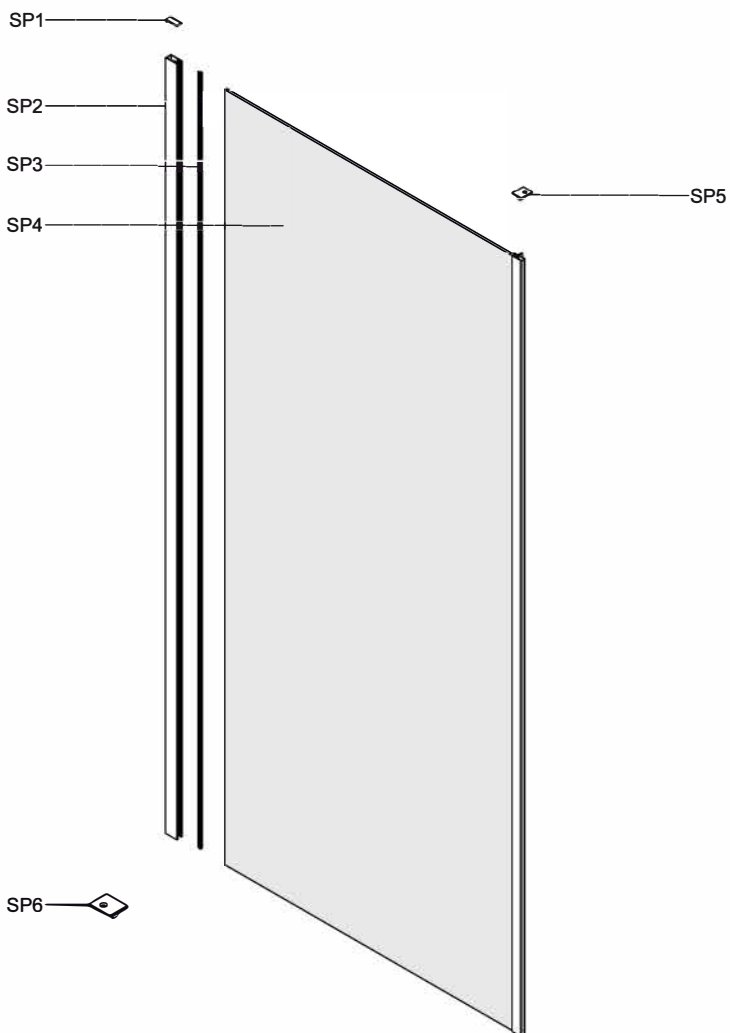


	Number of pieces	
№	Stückzahl	Количество
#SP1	1	
#SP2	1	
#SP3	1	
#SP4	1	
#SP5	1	
#SP6	1	

Detailization / Details / В комплект входит

Elbe 74P03, 74P19, 74P06, 74P07, 74P10, 74P17, 74P18, 74P19, 74P20, 74P22


Neime 19P03, 19P07, 19P10, 19P18

Aisch 55P03, 55P19, 55P18, 55P07, 55P10, 55P22, 55P20, 55P17, 55P06

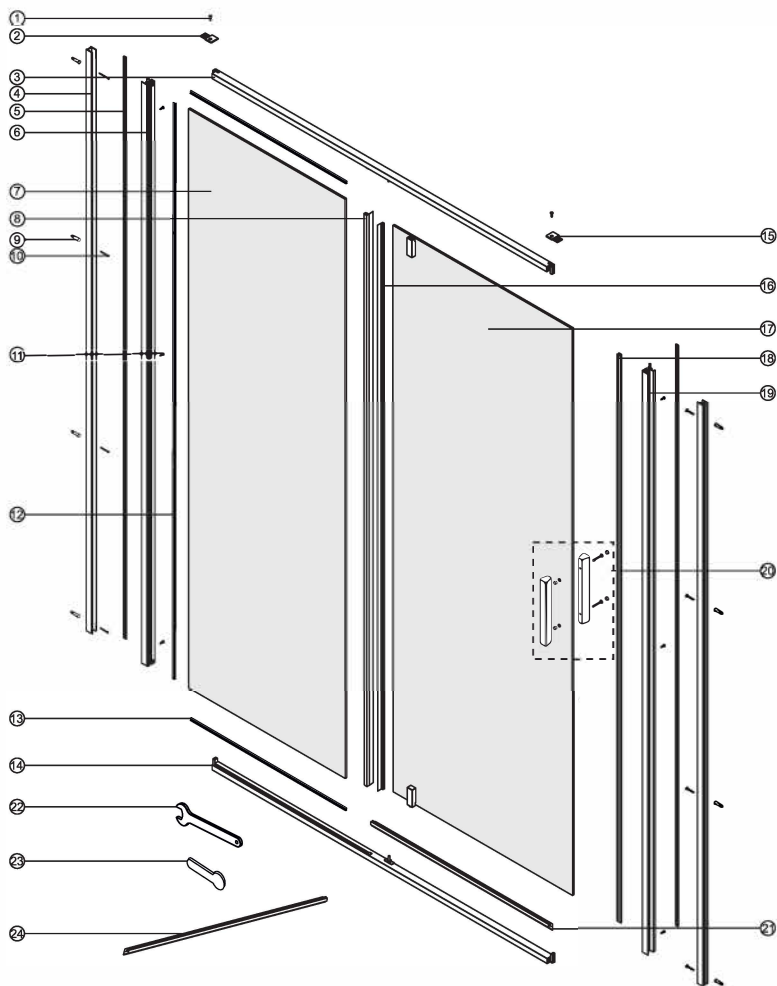

№	Number of pieces Stückzahl Количество	№	Number of pieces Stückzahl Количество	№	Number of pieces Stückzahl Количество
#1	2	#9	8	#17	1
#2	1	#10	8	#18	1
#3	1	#11	6	#19	1
#4	2	#12	1	#20	1
#5	2	#13	2	#21	1
#6	1	#14	1	#22	1
#7	1	#15	1	#23	1
#8	1	#16	1	#24	1

Preparation / Vorbereitung / Подготовка

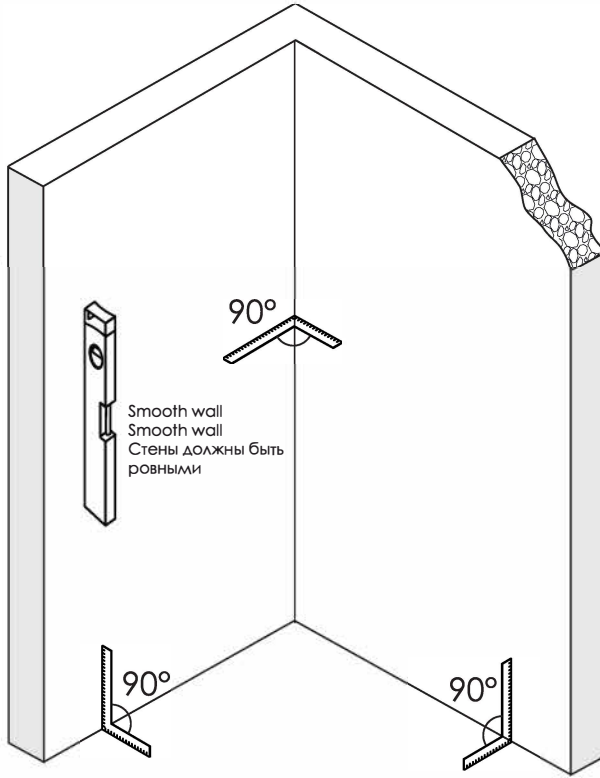

Tools and materials required / Werkzeuge und Materialien benötigt / Необходимые инструменты и материалы (в комплект не входят)




Drill
Bohrmaschine
Дрель



Screws
Schrauben
Саморезы



Screwdriver
Schraubendreher
Отвертка




Level
Level
Уровень



Precision knife
Schreibwaren Messer
Канцелярский нож



Silicone
Silikon
Силикон



Drill bits: 1/8", 3/16", 1/4"
*Masonry drill bits
Bohrer: 1/8", 3/16", 1/4"
*für die Steinmauer
Сверла: 1/8", 3/16", 1/4"
*Сверла для каменной стены



Measuring tape
Maßband
Рулетка



Set square
Anschlagwinkel
Угольник



Pencil
Bleistift
Карандаш



Mallet
Mallet
Деревянный молоток


Installation / Montage / Монтаж

Elbe 74P03, 74P19, 74P06, 74P07, 74P10, 74P17, 74P18, 74P19, 74P20, 74P22

Neime 19P03, 19P07, 19P10, 19P18

Aisch 55P03, 55P19, 55P18, 55P07, 55P10, 55P22, 55P20, 55P17, 55P06

1






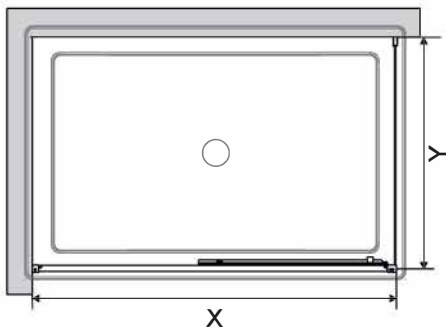


SIZE	X,mm	Y,mm
900X800	890-900	782,5-794,5
900X900	890-900	882,5-894,5
900X1000	890-900	982,5-994,5

SIZE	X,mm	Y,mm
1000X800	990-1000	782,5-794,5
1000X900	990-1000	882,5-894,5
1000X1000	990-1000	982,5-994,5

SIZE	X,mm	Y,mm
1200X800	1190-1200	782,5-794,5
1200X900	1190-1200	882,5-894,5
1200X1000	1190-1200	982,5-994,5

2

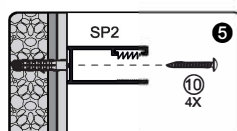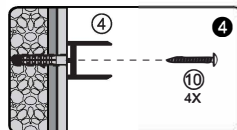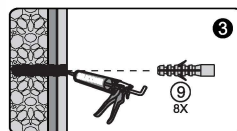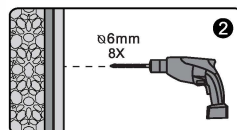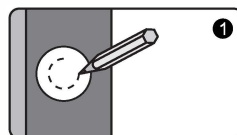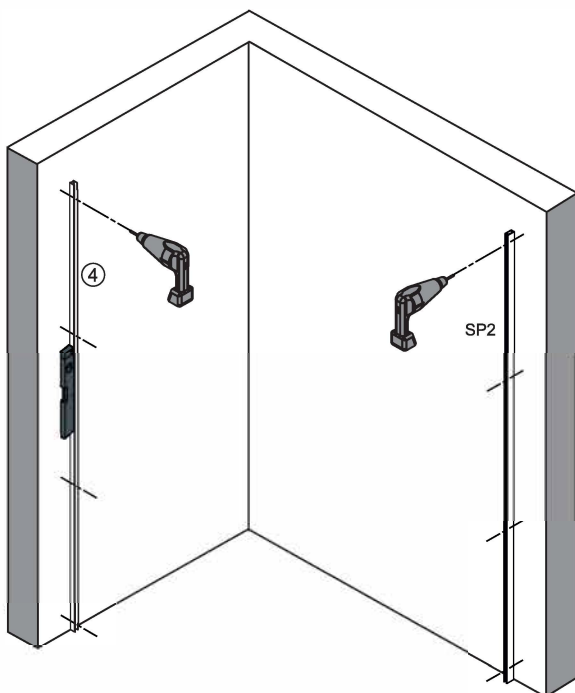




Installation / Montage / Монтаж

Elbe 74P03, 74P19, 74P06, 74P07, 74P10, 74P17, 74P18, 74P19, 74P20, 74P22


Neime 19P03, 19P07, 19P10, 19P18

Aisch 55P03, 55P19, 55P18, 55P07, 55P10, 55P22, 55P20, 55P17, 55P06


3

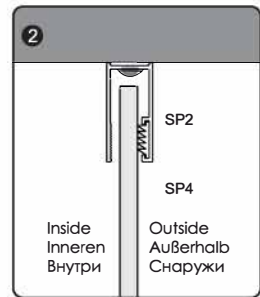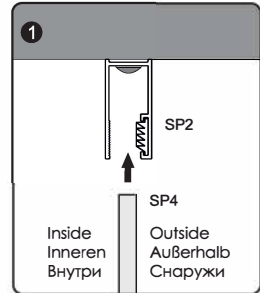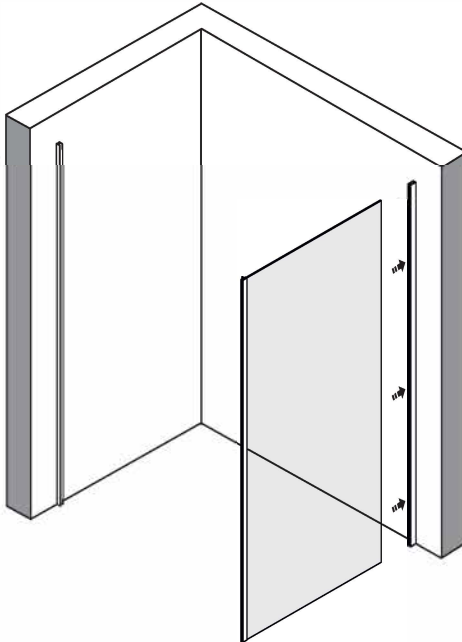

4

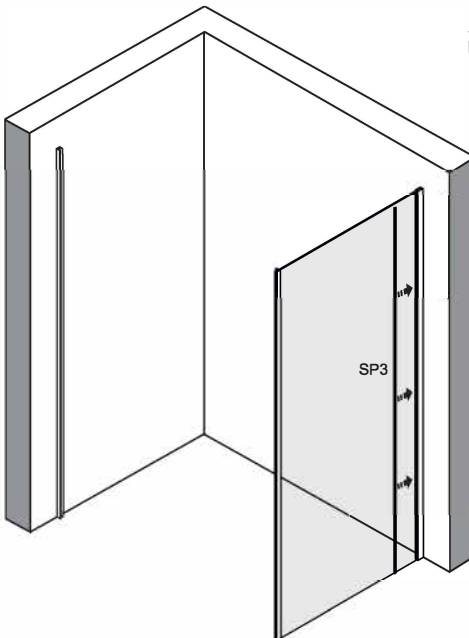

Insert gasket by half only
Stecken Sie die Silikonichtung zur Hälfte ein
Вставьте силиконовый уплотнитель на половину

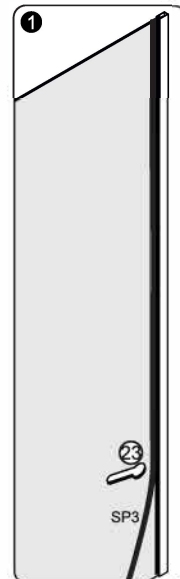

Installation / Montage / Монтаж

Elbe 74P03, 74P19, 74P06, 74P07, 74P10, 74P17, 74P18, 74P19, 74P20, 74P22







Neime 19P03, 19P07, 19P10, 19P18

Aisch 55P03, 55P19, 55P18, 55P07, 55P10, 55P22, 55P20, 55P17, 55P06

6-15 Install the door in accordance with manual
Installieren Sie die Duschkabinentür als Anleitung von
Установите дверь по инструкции

Elbe 74P04, Elbe 74P05, Elbe 74P12, Neime 19P04, Neime 19P05,
Aisch 55P04, Aisch 55P05, Aisch 55P12

15

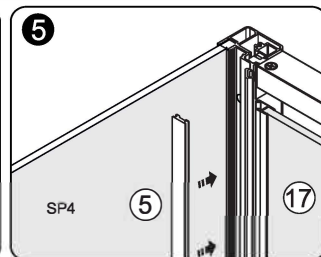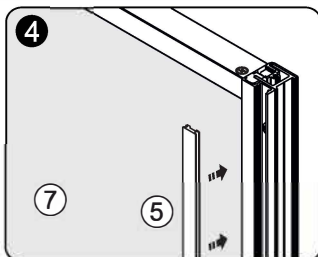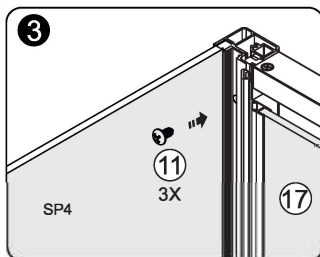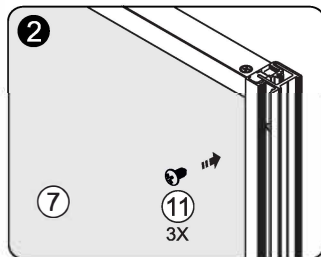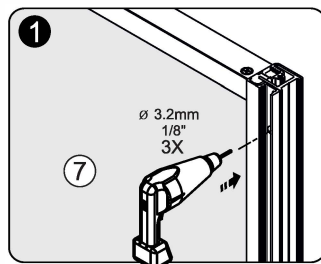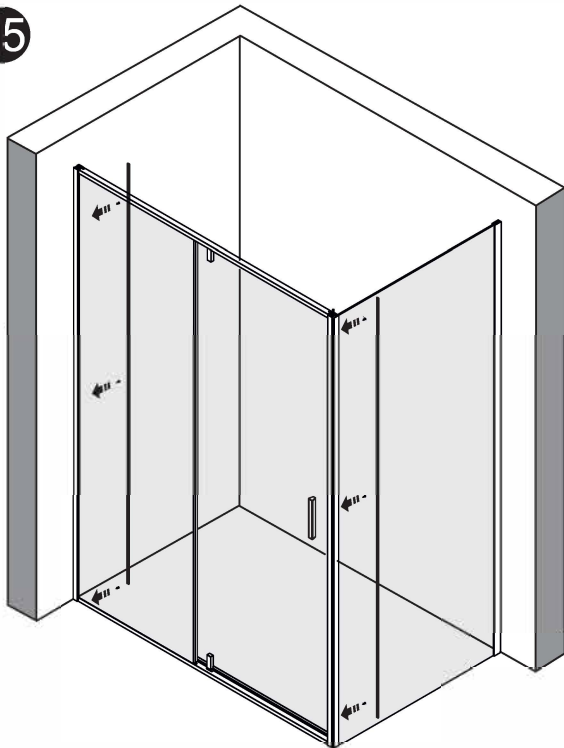







Installation / Montage / Монтаж

Elbe 74P03, 74P19, 74P06, 74P07, 74P10, 74P17, 74P18, 74P19, 74P20, 74P22






Neime 19P03, 19P07, 19P10, 19P18

Aisch 55P03, 55P19, 55P18, 55P07, 55P10, 55P22, 55P20, 55P17, 55P06

16

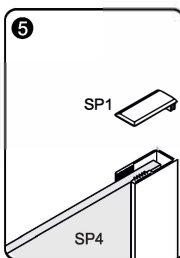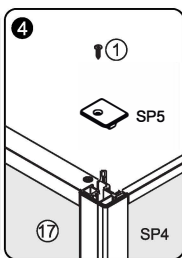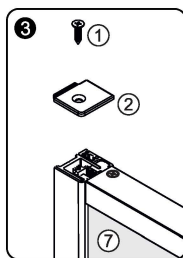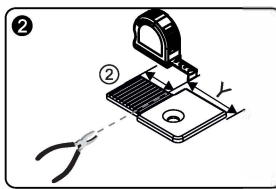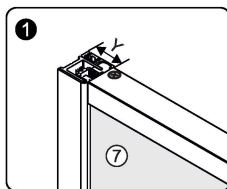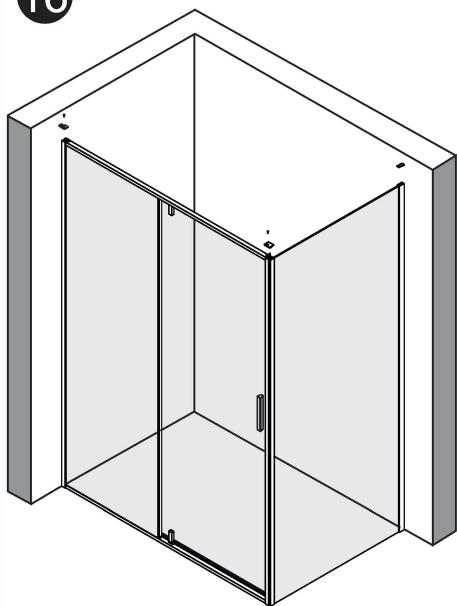

17

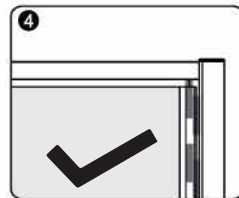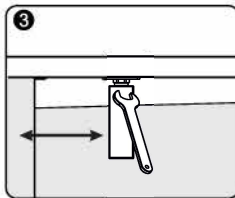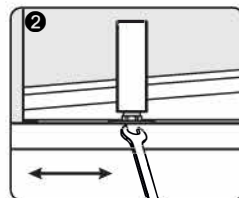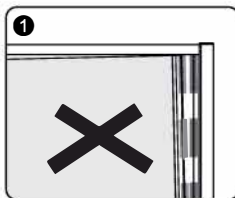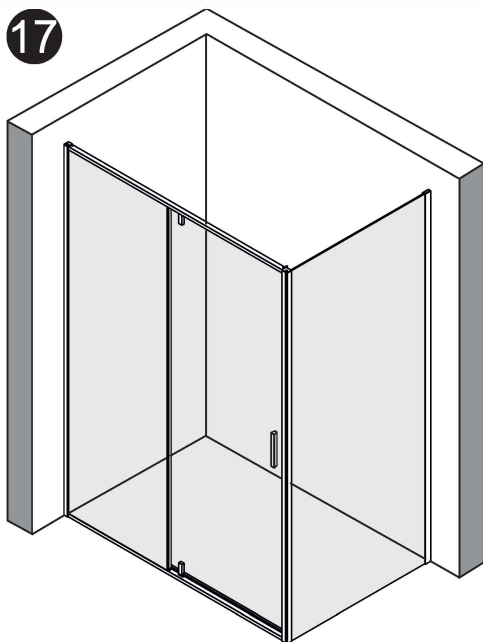


Installation / Montage / Монтаж

Elbe 74P03, 74P19, 74P06, 74P07, 74P10, 74P17, 74P18, 74P19, 74P20, 74P22


Neime 19P03, 19P07, 19P10, 19P18

Aisch 55P03, 55P19, 55P18, 55P07, 55P10, 55P22, 55P20, 55P17, 55P06




18

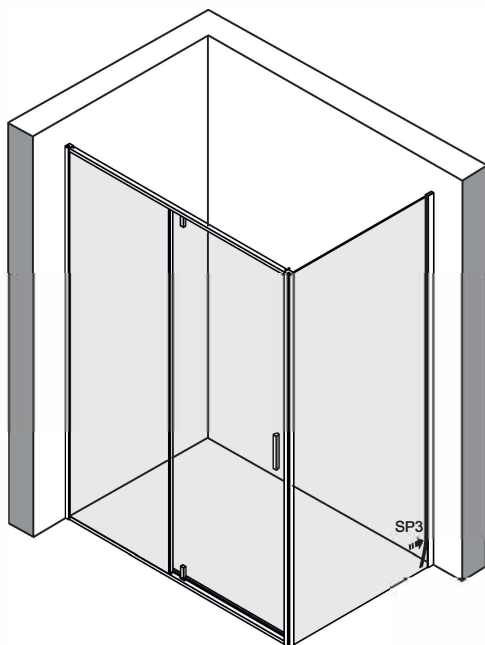

Insert the gasket fully
Stecken Sie die Silikonichtung komplett ein
Вставьте силиконовый уплотнитель полностью

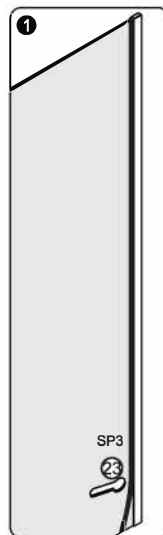

19

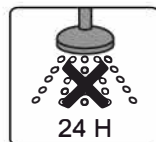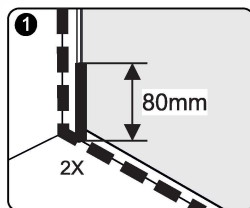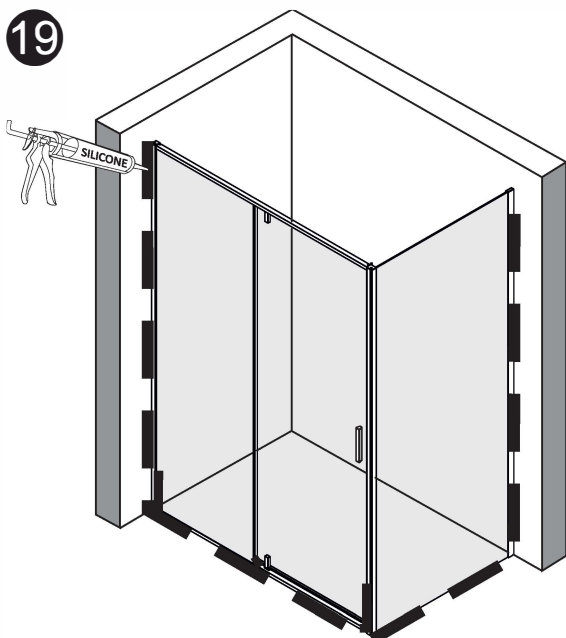

24 H

